

網路攝影機 快速入門指南

QND-7012R/7022R/7032R/7082R
QNV-6014R/7012R/7022R/7032R/6084R/7082R
QNO-6014R/7012R/7022R/7032R/6084R/7082R




COMPONENT

各個販售國家 / 地區提供的配件不盡相同。


- QND-7012R/7022R/7032R/7082R



- 不包含：microSD 卡

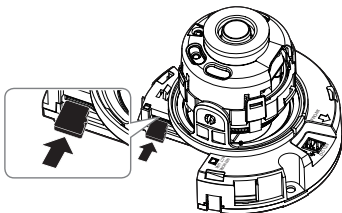


INSTALLATION

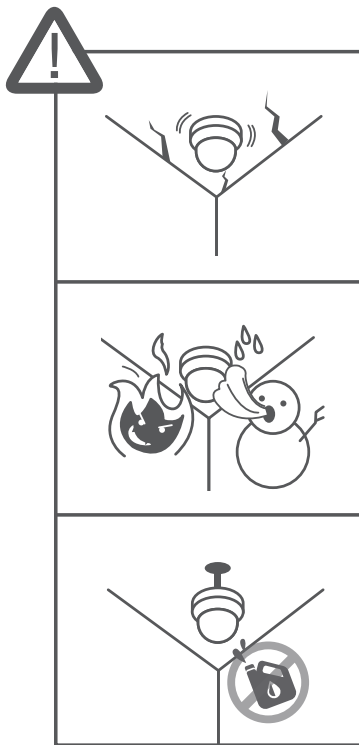


INSTALLATION

1

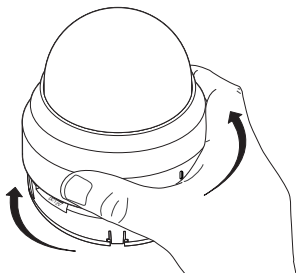


2

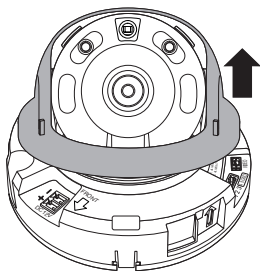


INSTALLATION

3

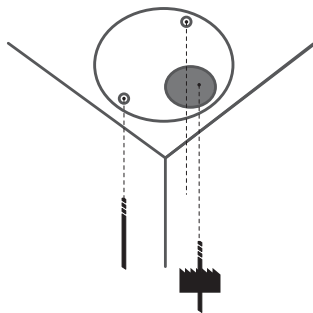


4

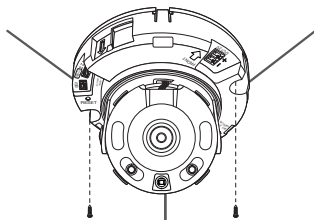

5

INSTALLATION

5

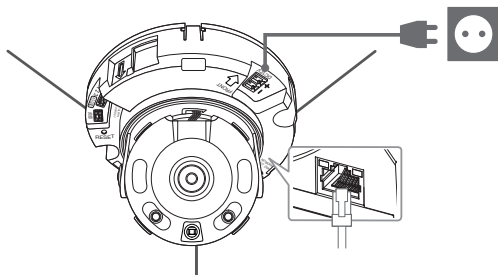



6



INSTALLATION





 7

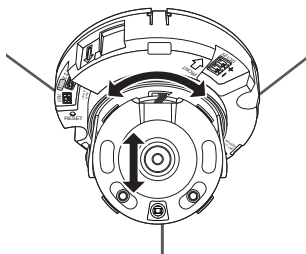


INSTALLATION

8

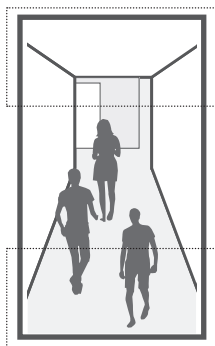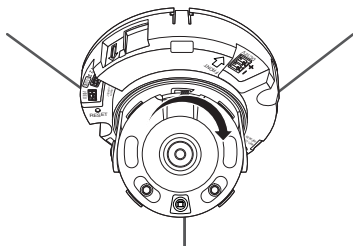


INSTALLATION

9

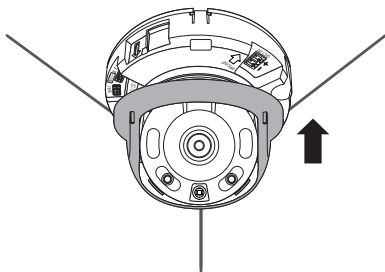


10

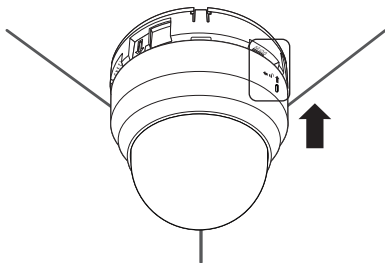


COMPONENT

各個販售國家 / 地區提供的配件不盡相同。

 
- QNO-6014R/7012R/7022R/7032R/6084R/7082R



- 不包含：microSD 卡

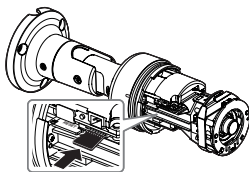


INSTALLATION

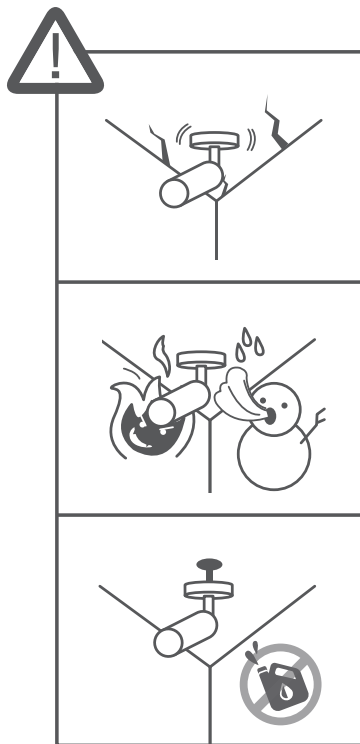


INSTALLATION

1

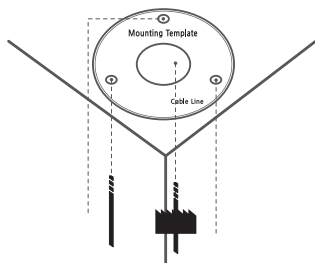


2

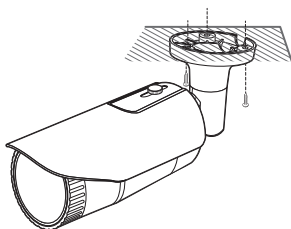

INSTALLATION


3

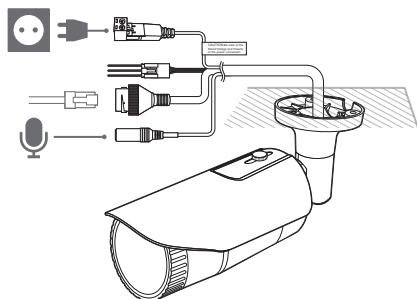



4





INSTALLATION

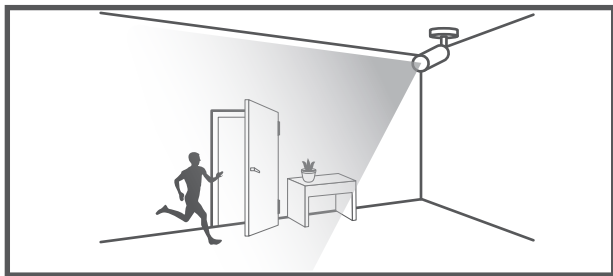

5

 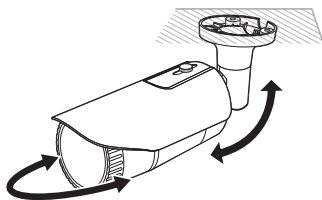


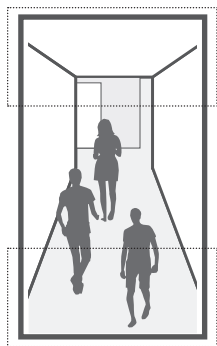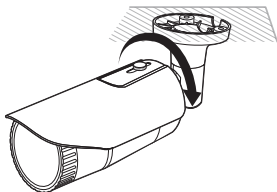


COMPONENT

各個販售國家 / 地區提供的配件不盡相同。


- QNV-6014R/7012R/7022R/7032R/6084R/7082R

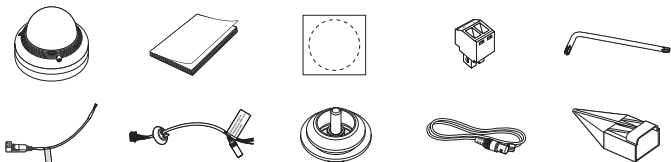

- 不包含：microSD 卡

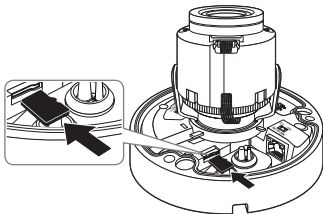


INSTALLATION

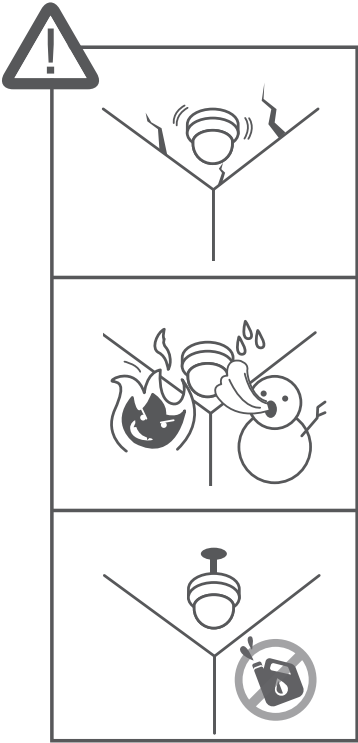


INSTALLATION

1

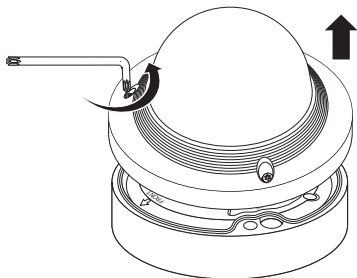


2

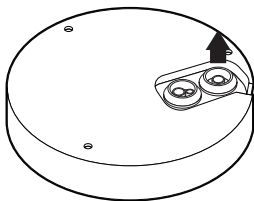


INSTALLATION

3

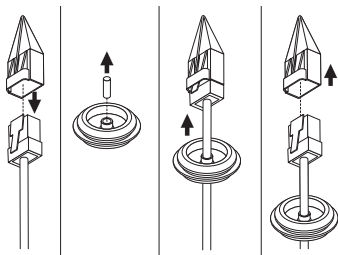


4

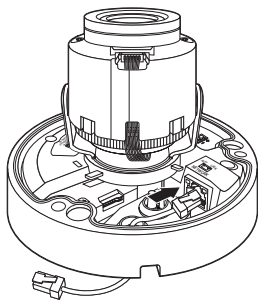


INSTALLATION

5

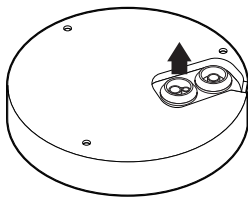


6

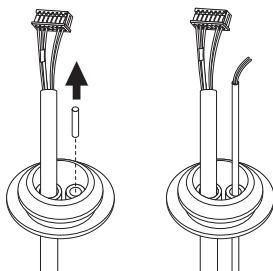


INSTALLATION

7

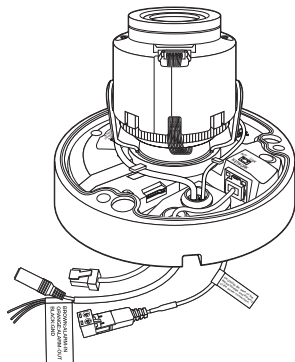


8

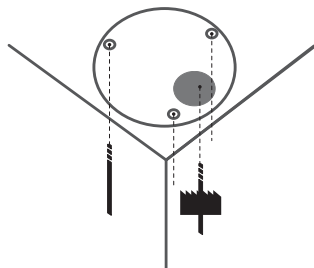


INSTALLATION

9

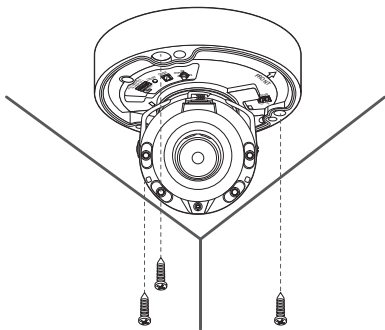


10

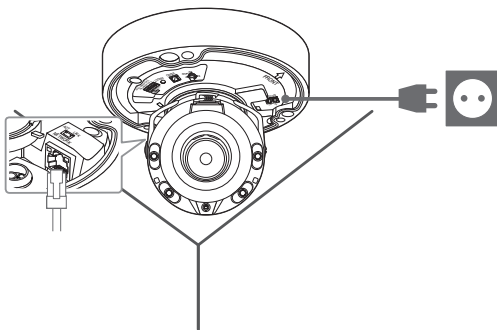

INSTALLATION

11

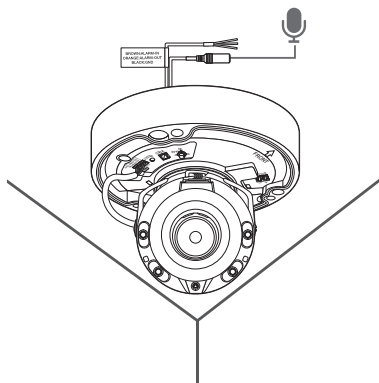



12






INSTALLATION



13

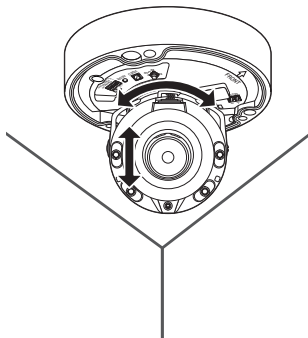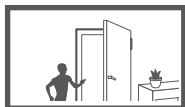

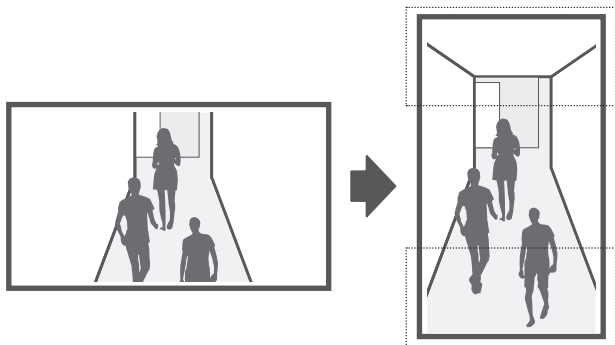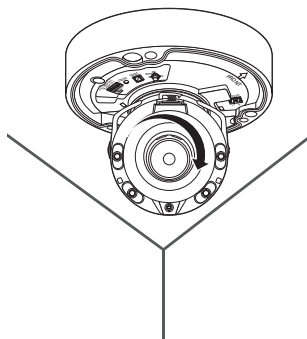

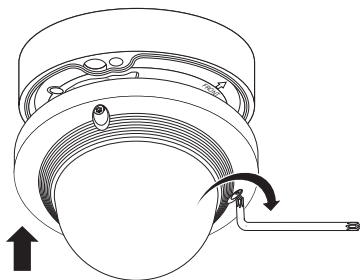

設定密碼

首次存取產品 須註冊登入密碼。

Administrator password change

New password

Confirm new password

- If the password is 8 to 9 characters long, then it must include a combination of at least 3 of the following character types: alphabet letters with uppercase or lowercase, numbers, and special characters.
- If the password is longer than 10 characters, then it must include a combination of at least 2 of the following character types: alphabet letters with uppercase or lowercase, numbers, and special characters.
- ID may not be used as password. We recommend not to use your ID string as part of the password.
- The following special characters can be used: ~!@#\$%^&*()_+=|{}[]'"/.
- You may not use more than 4 consecutive characters. (example: 1234, abcd, etc.)
- You may not use the same character 4 or more times consecutively. (example: 1111, aaaa, etc.)



- 若新密碼長度為 8 到 9 個位數，須至少包含下列 3 種字元：大小寫字母、數字與特殊字元。若密碼長度介於 10 到 15 個位數，則須至少包含上述 2 種字元。
 - 可使用的特殊字元：
~!@#\$%^&*()_+=|{}[]'"/.
- 為提高安全性，建議密碼不要包含重複的字元，或鍵盤上的相鄰字元。
- 如遺失密碼，可按下 [RESET] 按鈕，將產品初始化；請寫下或記下密碼，以免遺失。

登入

只要存取攝影機，就會出現登入視窗。
請輸入使用者 ID 與密碼來存取攝影機。

- ❶ 請在 <User Name> 輸入方塊中輸入「admin」。
- ❷ 請在 <Password> 輸入欄位中輸入密碼。
- ❸ 按一下 [Sign in]。



Harwha Vision cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products.

The Eco mark represents Harwha Vision's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



microSD, microSDHC, and microSDXC Logos are trademarks of SD-3C LLC. microSD, microSDHC, microSDXC are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.



Подлежит использованию по назначению
в нормальных условиях
Срок службы : 7 лет.

Türkiye Distribütörü

EDS Elektronik Destek Sanayi ve Ticaret Ltd. Şti.

Meclis Mah. Teraziler Cad. Hayran Sk. (Eskisi Kılıç Sk.) No: 4 Sancaktepe / İstanbul / Türkiye
Tel +90.216.313.25.15

ENTES ELEKTRONİK CİHAZLAR İMALAT VE TİC. A.Ş.

Dudullu Org.San.Bölg. 1. Cad. No:23 34776 Ümraniye / İstanbul / Türkiye
Tel +90.216.313.01.10

TEKNOMAKS TEKNOLOJİ / TEKNOMAKS BİLİSİM

MERDİVENKÖY MAH.DİKYOL SOK. BUSINESS İSTANBUL No:2, Kat:7, D:B67, 34732 Kadıköy / İstanbul / Türkiye
Tel +90.212.217.54.22

Cihazın Ticaret Bakanlığına önerilen ortalama ömrü

Cihazın EEE yönetmeliklerine uygun olduğuna benzer beyan

